


Cartridge:	LC-57	Cartridge Wt. New:	LC57 Black 61 grams Colour 48 grams
OEM:	Brother	Printer:	DCP-130C/330C/540CN MFC-240C/440CN/665CW FAX-2480C/1360 MFC-3360C/5460CN/5860CN
Printhead Location:	Cartridge	Cartridge Type:	Ink Tank
Reliability:	* * * *	Skill Level:	Average

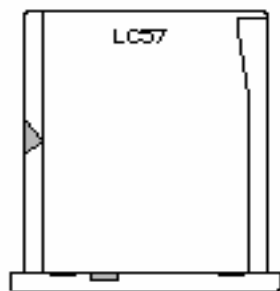

Ink Pump

Ink Port



Drill the end of the Syringe with a 3mm drill.

© Ausjet Ink Jet Supplies and Service Pty Ltd

COMMENTS

The Brother LC-57 is a black and colour sponge less cartridge which is extremely easy to refill and very reliable. The cartridge has an internal plastic bag which holds the ink.

REQUIREMENTS

- ◆ 30 ml Appropriate Black or colour ink.
- ◆ 20 ml Appropriate Colour Ink
- ◆ 20 ml syringe
- ◆ Sealing tape to seal the ink port while refilling.

REFILLING METHOD

STEP 1.

Remove the cartridge from the printer.

STEP 2.

Hold the cartridge so the ink port and ink pump is facing upwards. If fitted remove the yellow base section of the cartridge by lifting it straight up.

STEP 3.

Fill syringe with 10 ml ink. Remove the needle from the syringe. Place the end of the syringe over the ink pump and push down as far as the ink pump will go. Some types of syringes will need to have the end enlarged by a 3 mm drill . (The ink pump has the protruding white plastic plunger). Inject the ink very slowly into the Cartridge. If the pressure in the cartridge builds up and the ink wont go into the cartridge. Remove the syringe and push the plunger of the ink pump down to release the air pressure then continue refilling the cartridge.

STEP 4.

Remove syringe when the correct amount of ink is placed in the cartridge then wipe of any excess ink with some tissues. Replace the bottom yellow piece of plastic (if supplied). Check for leaks around the ink port if leaking seal with tape.

STEP 5.

Only remove the tape from the ink port when you are ready to place the cartridge into the printer. Run some cleaning cycles and test prints.