

## Ausjet Resetter for LC-131/133/135/137/139 Cartridges

1) Resetter with adaptor installed. Note the three pins on the resetter that will need to line up with the three contacts on the chip.



2) The arrows show the two parts that need to line up to ensure the cartridge is sitting in the adaptor correctly.



3) Make sure the pins are lined up as best as you can and then push down on the resetter which activates a switch.

Hold the resetter down for a few seconds until you receive a stationary green light. If the green light is stationary this means the chip has been correctly installed.

If the light is stationary red this indicates a failed reset, adjust the position of the resetter and retry again until you receive the stationary green light.

