


Cartridge:	T007,T015,T017, T026,T028.T034 TO38	Cartridge Wt. New:	T007 27Grams approx T015 36 Grams approx T017 38 Grams approx T026 34 Grams approx T028 38 Grams approx T034 64 Grams approx TO38 29 Grams approx
OEM:	Epson	Printer:	Stylus 777,777i,780,785EPX,790, 870.875,890,895,915,1270. 1280 1290,c50,c60,photo 810 Pro xl, Stylus pro
Printhead location	Printer	Cartridge Type:	Sponge & Reservoir
Reliability:	**	Skill Level:	Average

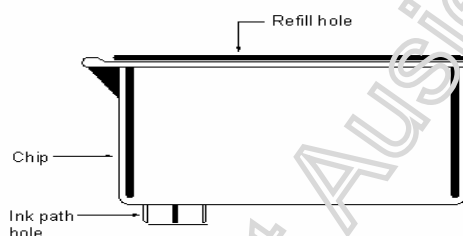

© Ausjet

COMMENTS

Because each of these cartridges contains a reservoir and a sponge filled section the instructions are the same even though the ink types and quantities vary. Read special Epson section on page 37 first.

REQUIREMENTS

(See Epson section on page 37 for more information).

- ◆ Appropriate Black Ink. (Refer to Ausjet Ink Selector)
- ◆ 1 x 20 ml syringe per colour
- ◆ Tape or Epson plugs
- ◆ Ausjet chip re-setter

REFILLING METHOD

STEP 1.

Turn cartridge over to locate the ink path holes. Seal ink path holes using tape or Epson plugs. (See Epson section on page 37 for more information).

STEP 2.

Locate the filling hole usually near the cartridge number on top of the cartridge. Remove a section of the label around the filling hole. Insert the syringe into the cartridge till it reaches the bottom of the cartridge. Inject the ink s-l-o-w-l-y until full. Remove the syringe from the cartridge. Seal the fill hole with hot melt glue.

STEP 3.

Reset chip on the cartridge.