


Cartridge:	T0321,T0322,T0323 T0324	Cartridge Wt. New:	T0321 BK Approx 69g COLOR Approx 41g
OEM:	Epson	Printer:	C70/C80/C82/CX5100 CX5200/CX5300
Printhead Location:	Printer	Cartridge Type:	
Reliability:	*	Skill Level:	EXPERT

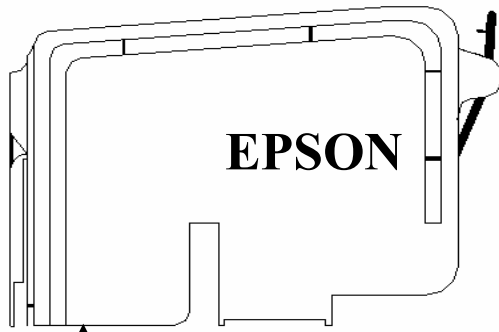

Remove label and holding the Cartridge the same way as the drawing shows slowly refill the first hole from the left

COMMENTS

Read special Epson section on page 37 first.

REQUIREMENTS

- ◆ T0321 BLACK **25ml** of ink
- ◆ T0322,T0323,T0324 **15ml** of appropriate Cyan, Magenta, Yellow inks.
- ◆ 3x20ml SYRINGES for colour inks
- ◆ 1x30ml SYRINGE for black ink
- ◆ 1 AUSJET CHIP RE-SETTER
- ◆ DRILL TOOL

REFILLING METHOD

Step 1.

Reset the cartridge with the Ausjet Chip Re-setter.

Step 2 .

Place the cartridge so that the ink exit hole is pointing down and is on the surface in front of you. The Epson Label should be pointing towards your chest. This is the front side of the cartridge.

Step 3 .

On the bottom left hand side of the cartridge is a blue label. Remove the label and you will find two refill ports covered with clear film.

Step 4 .

Only Remove the clear film on the left hand refill port.

Step 5 .

Fill your syringe with the appropriate amount of Ink. Put the syringe into the left hand refill port hole. This may take a bit of pressure to pierce the plastic.

Turn to next page

Step 6 .

Fill the cartridge very S-l-o-w-l-y with the appropriate ink. The ink has to have time to run into the various internal chambers. Air and ink bubbles will come out of this hole. This is normal , be careful not to over full.

Step 7 .

Seal the refill port hole with hot melt glue or tape.

© Ausjet Ink Jet Supplies and Service Pty Ltd

Copyright Ausjet