


Cartridge:	HP21 C9351	Cartridge Wt. New:	Approx 34 grams
OEM:	Hewlett Packard	Printer:	Deskjet 9352
Printhead Location:	Cartridge	Cartridge Type:	Sponge
Reliability:	**	Skill Level:	Average

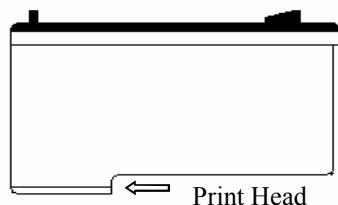

© Ausjet Ink Jet Supplies and Service Pty Ltd

Black

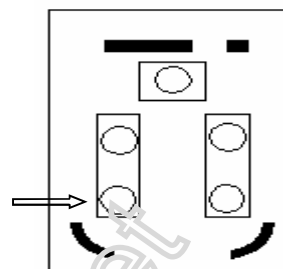


Fig. 2.63

COMMENTS

Be careful not to tear the label so you can reuse it. This is a low volume ink cartridge.

REQUIREMENTS

- ◆ 1 x 20 ml syringes and sharp needles.
- ◆ 5 ml of appropriate black Ink.
- ◆ Head sealing tape and or cartridge clip.
- ◆ HSC1000 solution or steam for improved results.

REFILLING METHOD

Step 1. Soak print head in HSC1000 for 10-20 mins or gently apply steam directly to printhead to remove dried ink from the print head nozzles.

Step 2. Put the cartridge on some paper towels in an area where you can tolerate a spill.

Step 3. Peel back the top label.

Step 4. Fill the syringe with 5ml. of appropriate black ink. When the cartridge is new it holds 5 ml.

Step 5. Very S-L-O-W-L-Y inject ink into a chamber until the sponge is full. A little ink might come out of the top when full. If the cartridge is overfilled, draw some ink back with the syringe.

Step 6. When finished, replace the top label.

Step 7. Then do a DAB test.

Step 8. Replace the cartridge and run 1 - 3 cleaning cycles as per printer instructions.