
Cartridge:	HP93 C9361W	Cartridge Wt. New:	
OEM:	Hewlett Packard	Printer:	Photo smart 7830 Deskjet 5440
Printhead Location:	Cartridge	Cartridge Type:	Sponge
Reliability:	**	Skill Level:	Average

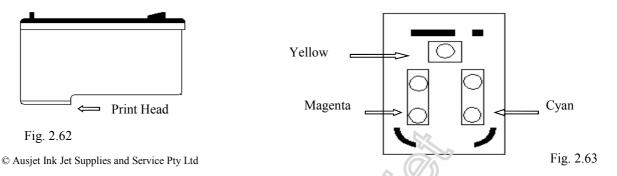

## COMMENTS

Be careful not to tear the label so you can reuse it.

# REQUIREMENTS

- ♦ 3 x10ml syringes and sharp needles.
- ♦ 2 ml of appropriate colour Ink.
- Head sealing tape and or cartridge clip.
- HSC1000 solution or steam for improved results.

### REFILLING METHOD

### Step 1.

Soak the print head in HSC1000 for 10-20 mins or gently apply steam direct to the printhead.

#### Step 2

Remove the label on the top of the cartridge You will find 5 holes.

# Step 3.

Turn the cartridge so that the single hote is farthest away from you and the other 4 holes are closest to you. You may fill through any of the following holes:

- The single hole farthest from you. This hole accepts the Yellow ink.
- The hole closest to you on the Left. This hole accepts the Magenta ink.
- The hole closest to you on right. This hole accepts the Cyan ink. To verify this information, insert an unbent paper clip into the hole you'd like to fill. See what colour comes up

#### Step 4.

Take a syringe and fill it with about 5 ml of ink.

# Step 5.

Insert the needle fully into the hole. Get the tip of the needle to the bottom of the cartridge. Inject the ink very S-L-O-W-L-Y and watch until the 5 ml of ink is inserted or the sponge is saturated. You must get the needle **deep** into the hard sponge. It is not necessary to reseal the holes unless you plan to store them and prevent ink drying out.

# Step 6.

Set above a paper towel for an hour as a drip precaution, perhaps over a small cup. Expect a few drips. Do not allow the cartridge to touch the paper towel at this point, since the towel will draw out the ink.

Step 7. Use the Ausjet priming tool to remove air locks and the prime the cartridge. Do a DAB test.

**Step 8** Replace the cartridge and run 1 - 3 cleaning cycles as per printer instructions