
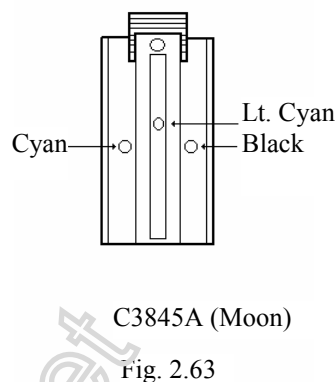


<b>Cartridge:</b>	<b>C3844A, C3845A</b>	<b>Cartridge Wt. New:</b>	Approx 160 g
<b>OEM:</b>	<b>Hewlett Packard</b>	<b>Printer:</b>	PhotoSmart
<b>Printhead Location:</b>	Cartridge	<b>Cartridge Type:</b>	Sponge
<b>Reliability:</b>	*	<b>Skill Level:</b>	Expert

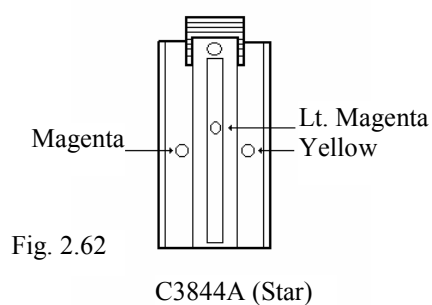

© Ausjet Ink Jet Supplies and Service Pty Ltd

#### COMMENTS

The C3844A and C3845A are known as the Star and Moon Photo cartridges. They are tri colour cartridges containing three sponge filled chambers similar to the 51541a style of cartridge.

#### REQUIREMENTS

- ◆ C3844a: 0-10 ml each Appropriate Magenta, Lt Magenta and Yellow Inks
- ◆ C3845a: 0-10 ml each Appropriate Cyan, Lt. Cyan and Black Inks
- ◆ 3 x 20 ml syringe with 100 mm sharp needle (one for each ink)
- ◆ HSC1000 high speed cleaning solution or steam for improved results.
- ◆ Head sealing tape and or cartridge clip.

#### REFILLING METHOD

##### STEP 1.

Soak the print head in HSC1000 for 10-20 mins or gently apply steam direct to the printhead.

##### STEP 2.

On the top of the cartridge opposite the print head you will notice three indentations. (See Fig. 2.59). Push in the small ball plugs in each indentation. If there are no plugs, you will see perforated indentations. Drill a small hole in the centre of these indentations. This is where the cartridge vents.

##### STEP 3.

If you are unsure as to which colour is in each chamber, push a toothpick into each chamber and pull it out. Sit the print head against newspaper or damp lint free cloth whilst filling to avoid a drop forming on the print head while filling.

Draw up to 10 ml of the appropriate colour into the syringe. Insert needle into the hole as far as it will go, angling toward the front and then inject ink very s-l-o-w-l-y. Do not add additional ink. If the ink flows to the top then draw back on the syringe removing excess. **Do not reseal the hole** as this is a vent hole.

##### STEP 4.

If print head is dripping, allow to drain against a damp, lint free cloth before installing in your printer. See colour section for information on shipping. If this cartridge is not taped correctly cross-contamination will occur. If cross contamination does occur leave cartridge standing upright on tissues for a few minutes. Or till The cross contamination is cleared.

##### STEP 5.

Use the Ausjet priming tools to remove air locks and prime the cartridge. Then do a DAB test. Place cartridge in cartridge clip.