
Cartridge:	C6657AN, 57 C8728AN, 28 C5010A, 14	Cartridge Wt. New:	Approx 56-60g
OEM:	Hewlett Packard	Printer:	Desk jet Photo Smart & office jet 130,3320,3420,5550,5551 6110,7150,7550 PSC2130,PSC210,450cbi,450 ci
Printhead Location:	Cartridge	Cartridge Type:	Sponge
Reliability:	**	Skill Level:	Average

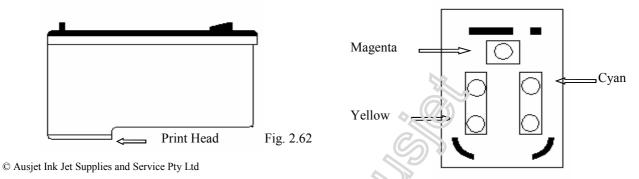

COMMENTS

It is not necessary to reseal the holes. Tape over the vent holes if you plan to store the cartridge for a while to prevent the ink drying out.

REQUIREMENTS

- 3 x10ml syringes and sharp needles.
- ♦ 4 ml of appropriate colour lnk. 7ml for the C5010D cartridge.
- ♦ HSC1000 solution or steam for improved results.
- Head sealing tape and or cartridge clip

REFILLING METHOD

Step 1. Soak the print head in HSC1000 for 0-20 mins or gently apply steam direct to printhead to remove dried ink from the print head nozzles.

Step 2. Put the cartridge on some paper towels in an area where you can tolerate a spill.

- **Step 3.** Peel off the top label.
- **Step 4.** Fill the syringe with 5 ml. of each appropriate colour ink.
- **Step 5.** Very S-L-O-W-L-Y inject ink into each chamber until the sponge is full. A little ink might come out of the top when full, so cover up the other two holes while you are filling one. If the cartridge is overfilled, draw some ink back into the cartridge.
- **Step 6**. When finished, replace the top label.
- **Step 7.** Do A DAB test.
- **Step 8.** Replace the cartridge and run 1 3 cleaning cycles as per printer instructions.

See re-setting tips on page 138