

Cartridge:	HP95 C8766W HP97 C9363W	Cartridge Wt. New:	Approx 42g Approx 49g
OEM:	Hewlett Packard	Printer:	Photosmart 325,375,2610,2710,8150, 8450 Psc2355, Deskjet 5740,6540,6840
Printhead Location:	Cartridge	Cartridge Type:	Sponge
Reliability:	**	Skill Level:	Average

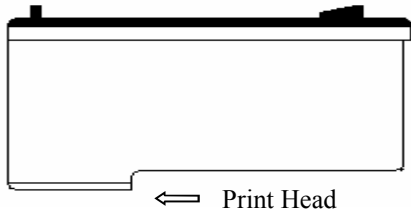


Fig. 2.62

© Ausjet Ink Jet Supplies and Service Pty Ltd

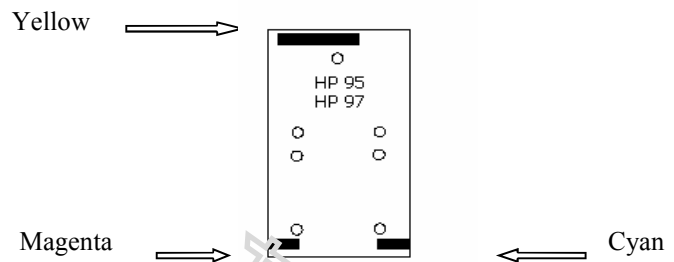


Fig. 2.63

COMMENTS

Be careful not to tear the label so you can reuse it. The low volume 95 cartridge can be refilled to the volume of the 97 high volume cartridge.

REQUIREMENTS

- ◆ 3 x10ml syringes and sharp needles.
- ◆ 4 ml of appropriate colour Ink.
- ◆ Head sealing tape and or cartridge clip.
- ◆ HSC1000 solution or steam for improved results.

REFILLING METHOD

Step 1.

Soak the print head in HSC1000 for 10-20 mins or gently apply steam direct to the printhead.

Step 2.

Remove the label on the top of the cartridge. You will find 5 holes.

Step 3.

Turn the cartridge so that the single hole is farthest away from you and the other 4 holes are closest to you. You may fill through any of the following holes:

- The single hole farthest from you. This hole accepts the Yellow ink.
- The hole closest to you on left. This hole accepts the Magenta ink.
- The hole closest to you on right. This hole accepts the blue Cyan ink. To verify this information, insert an unbent paper clip into the hole you'd like to fill. See what colour comes up

Step 4.

Take a syringe and fill it with about 4 ml of ink. When new, the cartridge holds 14 ml of ink.

Step 5.

Insert the needle fully into the hole. Get the tip of the needle to the bottom of the cartridge. Inject the ink very S-L-O-W-L-Y and watch until the sponge is saturated. You must get the needle **deep** into the hard sponge. It is not necessary to reseal the holes unless you plan to store them and prevent ink drying out.

Step 6.

Set above a paper towel for an hour as a drip precaution, perhaps over a small cup. Expect a few drips. Do not allow the cartridge to touch the paper towel at this point, since the towel will draw out the ink.

Step 7.

For best results, let sit overnight before using.

Step 8.

Use the Ausjet priming tool to remove air locks and the prime the cartridge.