


<b>Cartridge:</b>	<b>C9368W HP100</b>	<b>Cartridge Wt. New:</b>	Approx
<b>OEM:</b>	<b>Hewlett Packard</b>	<b>Printer:</b>	DeskJet 460 mobile Pro B8330 460cb, 6540, 6840, Photo smart 2608, 2610, 2710, 325, 375, 385, 425, 475, 7830, 8030, 8150, 8450, C3180, C4180, C4188, D5160, D5168
<b>Printhead Location:</b>	Cartridge	<b>Cartridge Type:</b>	Sponge
<b>Reliability:</b>	**	<b>Skill Level:</b>	Average

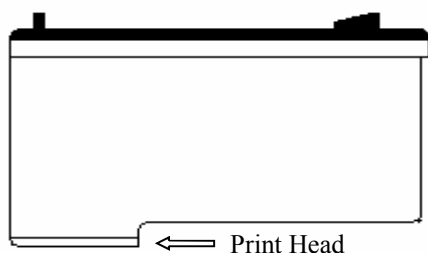

© Ausjet Ink Jet Supplies and Service Pty Ltd

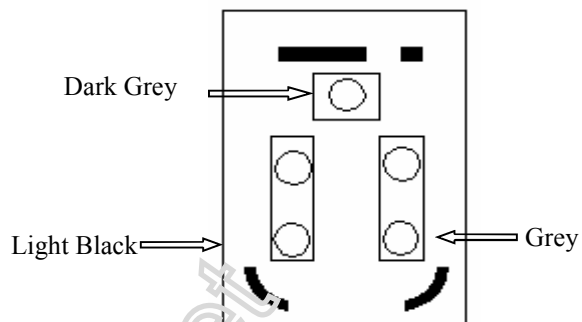


Fig. 2.62

## COMMENTS

It is not necessary to reseal the holes. Tape over the vent holes if you plan to store the cartridge for a while to prevent the ink drying out.

## REQUIREMENTS

- ◆ 3 x10ml syringes and sharp needles.
- ◆ 5ml of EACH appropriate Ink.
- ◆ HSC1000 solution or steam for improved results.
- ◆ Head sealing tape and or cartridge clip.

## REFILLING METHOD

**Step 1.** Soak the print head in HSC1000 for 10-20 mins or gently apply steam direct to print head to remove dried ink from the print head nozzles.

**Step 2.** Put the cartridge on some paper towels in an area where you can tolerate a spill.

**Step 3.** Carefully Peel off the top label you will need to replace this label on the cartridge.

**Step 4.** Fill the syringe with 5ml. of each appropriate colour ink.

**Step 5.** Very S-L-O-W-L-Y inject ink into each chamber until the sponge is full. A little ink might come out of the top when full, so cover up the other two holes while you are filling one. If the cartridge is overfilled, draw some ink back into the cartridge.

**Step 6.** When finished, replace the top label.

**Step 7.** Do A DAB test.

**Step 8.** Replace the cartridge and run 1 - 3 cleaning cycles as per printer instructions.