


Cartridge:	LC-03 BC/MY	Cartridge Wt. New:	Approx. 54g
OEM:	Brother	Printer:	MP 21C
Printhead Location:	Printer	Cartridge Type:	Sponge
Reliability:	* * *	Skill Level:	Novice

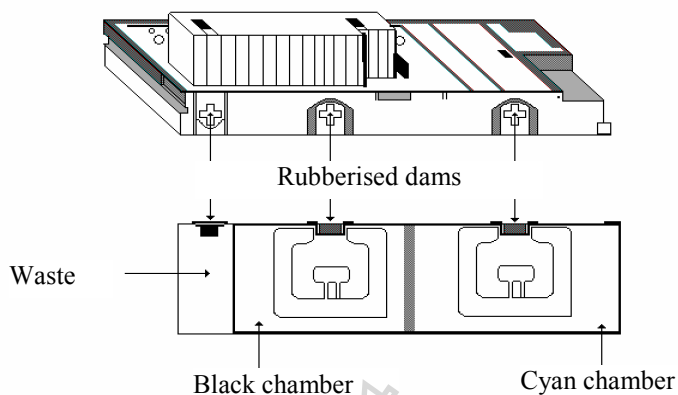

© Ausjet Ink Jet Supplies and Service Pty Ltd

Fig. 2.7

COMMENTS

The LC-03 BY is a black and cyan bi-colour cartridge, while the LC-03/Y is magenta and yellow. It contains two ink filled sacs under slight negative pressure. Printer pierces two rubberised dams to access the ink.

REQUIREMENTS

- ◆ 10-15 ml Appropriate Cyan and Black Inks. (Refer to Ausjet Ink Selector)
- ◆ 10 ml syringe (1 for each colour)
- ◆ 21 gauge sharp needle (1 for each colour)
- ◆ Plastic tubing (to form a sleeve over needle)

REFILLING METHOD

STEP 1.

With cartridge facing you, notice three cross shaped holes with white rubber dams. The furthestmost right dam leads into the cyan chamber. The middle dam leads into the black chamber.

STEP 2.

Attach the needle to the syringe and draw 10 ml of black ink into it. Place the cartridge on some newspaper in case of spillage.

STEP 3.

Taking care not to prick yourself, place plastic sleeve over the needle leaving only enough to pierce the rubber dam in the cartridge. This is to prevent your pushing the needle further into the cartridge and piercing the plastic ink holding sac.

STEP 4.

Take notice of the small pin hole where the printer originally punctured the rubber dam. Insert the needle as close as possible to this point as we do not want to start a new point of entry. Slowly Inject 10 -15 ml into the dam taking care not to inject air or froth. Repeat for the cyan port to the right. The procedure is exactly the same for the LC-03MY except for the inks which in this case are magenta and yellow.