

<b>Cartridge:</b>	<b>BCI-21 Colour</b>	<b>Cartridge Wt. New:</b>	Approx 35 g
<b>OEM:</b>	<b>Canon</b>	<b>Printer:</b>	BJC-2000, 2100,4000 4100, 4200, 4300 4310SP, 4550, 4650 5000, 5500
<b>Printhead Location:</b>	Disposable	<b>Cartridge Type:</b>	Sponge
<b>Reliability:</b>	* * * * *	<b>Skill Level:</b>	Novice

Ink Ports

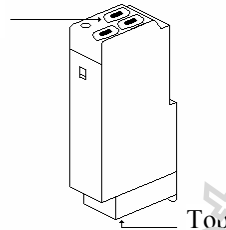


Fig. 2.20

© Ausjet Ink Jet Supplies and Service Pty Ltd

### COMMENTS

This is a single, sponge filled cartridge containing the three colours, cyan, magenta and yellow. This has got to be the easiest cartridge to refill. We've tested this method on our own printers and it works. If you prefer a faster method please turn back two pages for refilling methods 1 and 2 using the black cartridge as an example.

### REQUIREMENTS

- ◆ 0-5 ml each Appropriate cyan, magenta, yellow inks. (Refer to Ausjet Ink Selector)
- ◆ 3 x 5 ml syringes
- ◆ Ink port sealing clip

### METHOD 3— Drip Method through the ink port

#### STEP 1.

Remove the top of the cartridge to prevent intermixing of colours.

#### STEP 2.

Simply turn the cartridge over to locate the three ink path holes. You may like to cover two of the ink path holes with head sealing tape to prevent accidents caused by splashing.

#### STEP 3.

Drip up to 5 ml of the appropriate colour ink onto each ink path hole. When you notice that the ink is not being taken up as quickly by the sponge - slow down and turn the cartridge over until dripping stops. It is very easy to overfill this cartridge resulting in an over flow within the cartridge and as a consequence a mixing of the different colours. (If you do not turn the cartridge over to drip overflow can drip into the other chambers) When you are sure the cartridge is not dripping turn over so that ink path holes are facing up, tape over chamber you just filled and repeat procedure with the next chamber.