

<b>Cartridge:</b>	<b>BCI-10/BCI-10, BCI-11, BCI-12, BCI-17, BCI-18</b>	<b>Cartridge Wt. New:</b>	BCI-10 approx. 17 g BCI-11 approx. 6 g BCI-11c approx 11g
<b>OEM:</b>	<b>Canon</b>	<b>Printer:</b>	BJ-30/BJC-50, 70, 80, BJC-85
<b>Printhead Location:</b>	Disposable	<b>Cartridge Type:</b>	Sponge
<b>Reliability:</b>	* * * * *	<b>Skill Level:</b>	Novice

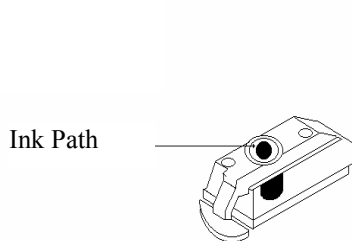


Fig. 2.22

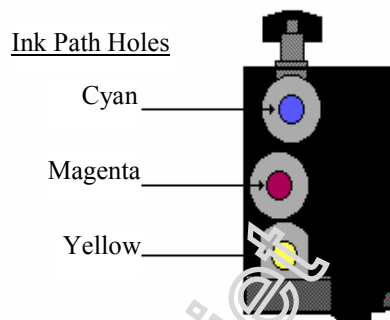


Fig. 2.23

© Ausjet Ink Jet Supplies and Service Pty Ltd

## COMMENTS

Just follow the three methods listed for the Canon BCI-21 ink tank. You can drip fill, fill under pressure or fill through the vent hole. We are showing the drip fill method here.

## REQUIREMENTS

- ◆ BCI-10: 5 ml Appropriate Black Ink (Refer to Ausjet Ink Selector)
- ◆ BCI-17: 9 ml Appropriate Black Ink
- ◆ BCI-11Bk: 2 ml Appropriate Black Ink
- ◆ BCI-12: 2 ml Photo Black Ink
- ◆ BCI-12 Photo Colour: Use Photo Inks
- ◆ BCI-18: 5 ml Appropriate Black Ink
- ◆ BCI-11 Col: 0-2 ml each Cyan, Magenta, Yellow Inks
- ◆ 5 ml syringe (One for each colour)

## REFILLING METHOD

### STEP 1.

Place the cartridge on paper towel or newspaper with the ink path hole facing upwards.

### STEP 2.

Drip the appropriate colour ink into the ink path hole until the ink is no longer absorbed. Turn the cartridge over immediately to drip.

If you are filling the tri-colour cartridge tape over the holes you are not filling to prevent accidents. As you fill each colour chamber turn cartridge over immediately to drip any excess before proceeding to another chamber. If you do not do this excess ink will drip out through the back of the cartridge and may cross into another chamber.

### STEP 3.

Wipe off excess ink and place cartridge face down on paper towel in order to absorb excess ink.