

Cartridge:	C6656AN, 56 C8727AN ,27 C5011A, 14	Cartridge Wt. New:	Approx 54-56g
OEM:	Hewlett Packard	Printer:	Desk jet Photo Smart & Office Jet 130,3320,3420,5550,5551 6110,7150,7550 PSC2130,PSC210,450cbi,450 ci
Printhead Location:	Cartridge	Cartridge Type:	Sponge
Reliability:	**	Skill Level:	Average



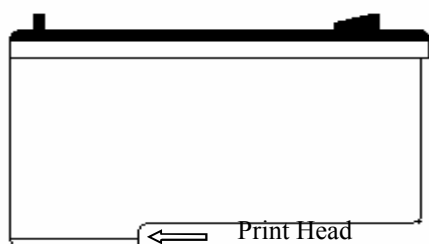


Fig. 2.62

Black
Refilling
Holes

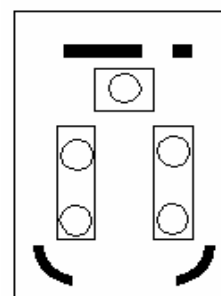

© Ausjet Ink Jet Supplies and Service Pty Ltd

COMMENTS

It is not necessary to reseal the holes. Tape over the vent holes if you plan to store the cartridge for a while to prevent the ink drying out.

REQUIREMENTS

- ◆ 1 x 20ml syringe and sharp needle.
- ◆ 15ml of appropriate black Ink for the HP37. 19 ml for the HP56.(C5011A 20ML of appropriate ink).
- ◆ Head sealing tape and or cartridge clip.
- ◆ HSC1000 solution or steam for improved results.

REFILLING METHOD

Step 1. Soak print head in HSC1000 for 10-20 mins or gently apply steam directly to print head to remove dried ink from the print head nozzles.

Step 2. Put the cartridge on some paper towels in an area where you can tolerate a spill.

Step 3. Peel off the top label.

Step 4. Fill the syringe with 15 ml. of appropriate black ink. When the cartridge is new it holds 19ml. The C5011A holds 26ml when new and will hold between 20 and 25 when refilled.

Step 5. Very S-L-O-W-L-Y inject ink into a chamber until the sponge is full. A little ink might come out of the top when full. If the cartridge is overfilled, draw some ink back with the syringe.

Step 6. When finished, replace the top label.

Step 7. Then do a DAB test.

Step 8. Replace the cartridge and run 1 - 3 cleaning cycles as per printer instructions.

See re-setting tips on page 138