


<b>Cartridge:</b>	<b>LC-57</b> <b>Refilling Method 3</b>	<b>Cartridge Wt. New:</b>	LC57 Black 61 grams Colour 48 grams
<b>OEM:</b>	<b>Brother</b>	<b>Printer:</b>	DCP-130C/330C/540CN MFC-240C/440CN/665CW FAX-2480C/1360 MFC-3360C/5460CN/5860CN
<b>Printhead Location:</b>	Cartridge	<b>Cartridge Type:</b>	Ink Tank
<b>Reliability:</b>	* * * *	<b>Skill Level:</b>	Average

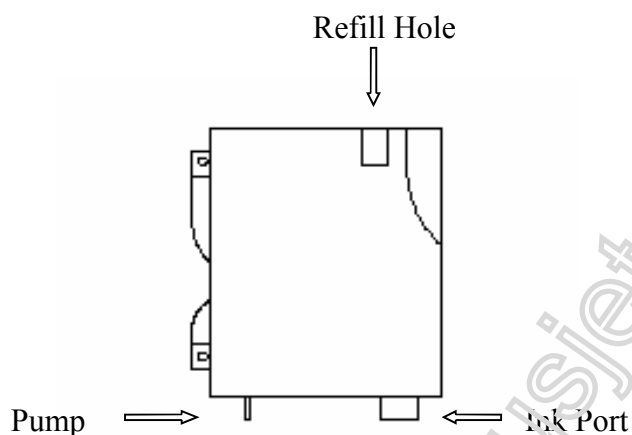

© Ausjet Ink Jet Supplies and Service Pty Ltd

## COMMENTS

The Brother LC-57 is a black and colour sponge less cartridge which is extremely easy to refill and very reliable. The cartridge has an internal plastic bag which holds the ink.

## REQUIREMENTS

- ♦ 30 ml Appropriate Black or colour ink.
- ♦ 20 ml Appropriate Colour Ink
- ♦ 20 ml syringe
- ♦ Sealing tape to seal the ink port while refilling.

## REFILLING METHOD

### STEP 1.

Remove the cartridge from the printer.

### STEP 2.

Hold the cartridge and use a Stanley knife/small screwdriver to separate the plastic sides of the cartridge. Remove the internal ink bag.

### STEP 3.

Hold the ink bag upright and at the opposite end of the cartridge to the ink port you will find a silicone plug. Remove this with a screw drill tool.

### STEP 4.

Fill a syringe with the correct amount of ink. Carefully place the needle into the hole you removed the silicone from and fill the ink bag with the correct amount of ink. Be very careful not to pierce the bag with the needle.

### STEP 5.

Remove syringe when the correct amount of ink is in the cartridge. Wipe up any residue ink and reseal the hole with the piece of silicone that you removed and place a covering of hot melt glue over the silicone so it doesn't leak.

### STEP 6.

Reassemble the cartridge. You might need to place some tape over the two halves to keep the cartridge together.